



How to unlock your Nokia E61.

Unlocking your mobile from the 3 network will let you use your phone with any SIM card.

You should have already got the unlock code from us and the rest is simple when you follow these instructions. Unlocking your mobile from the 3 network will let you use your phone with any SIM card. You should have already got the unlock code from us and the rest is simple when you follow these instructions.

Important: If you enter the code incorrectly three times, your Nokia will be permanently locked to the 3 network. If it gets locked, there's nothing we can do to unlock it for you so make sure you follow these steps carefully...

1. Have your unlock code handy.
2. Insert a 3 SIM card in the phone and switch power on.
3. Enter the # character.
4. Enter the P character.
5. Enter the W character.
6. Enter the + character.
7. Now type in the unlock code
8. Enter the + character.
9. Press the no. 1
10. Enter the # character.
11. If the code was correct, the phone will display "SIM restriction off"
12. Handset will then reboot and return to standby screen

That's it, done. Your mobile is now unlocked from the 3 network and you can use it with any SIM card you like. If you have any questions, you can contact us by calling 333 free from your mobile (if you have the 3 SIM card in) or 07782 333 333 from any other phone (national rate).